
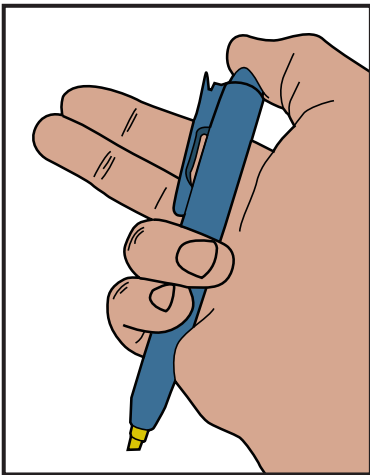


How to use the Detectamet Marker Pen & Highlighter Retraction System

To ensure that the Detectamet Marker Pens last as long as possible we have developed an anti-drying system that ensures our marker pens don't dry out when not in use.

Right: *This image illustrates the marker when the anti-drying system is engaged.*

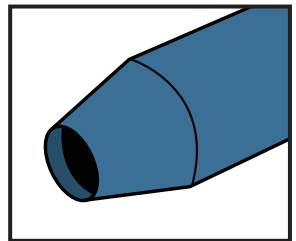

To successfully engage the anti-drying system cover, retract the nib using the button at the top of the pen and NOT via the pocket clip.